 


## Your Digital Camera's Menu Settings

The controls on your Sony digital camera

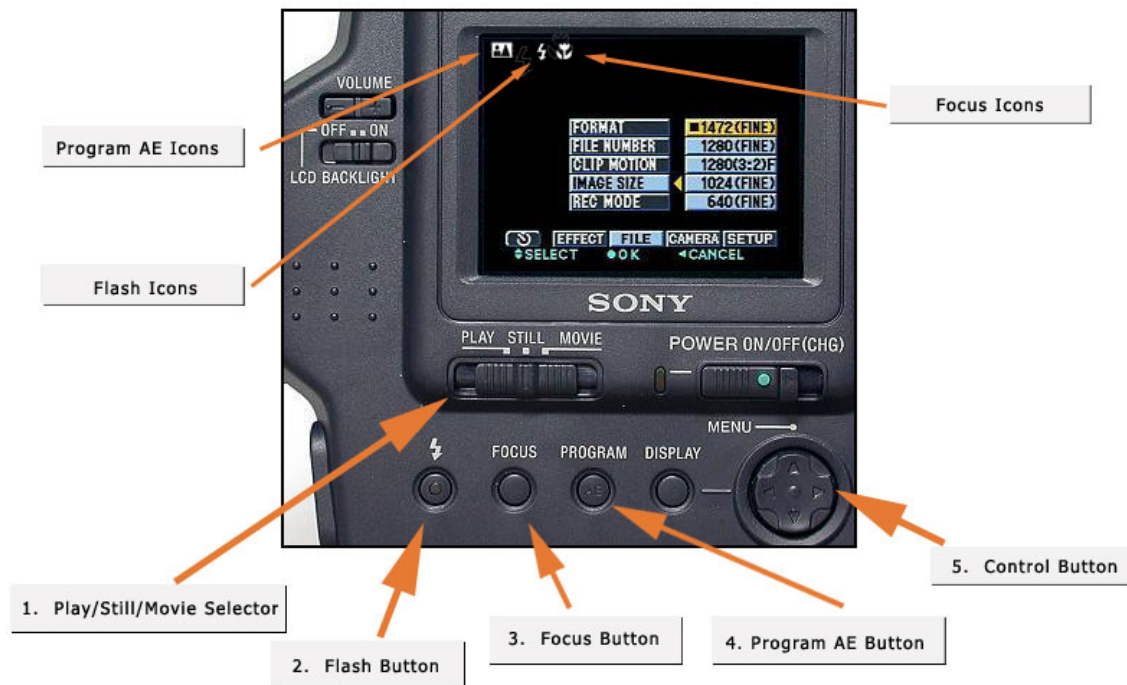




### 1. PLAY/STILL/MOVIE Selector

- Play – review still images
- Still – photograph still images
- Movie – record small movie clips


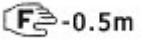 
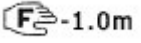 
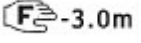 
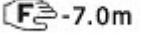 

### 2. Flash Button

The camera's default setting is for automatic flash control. When in automatic flash there is no indication on the LCD screen. By pressing the flash button, you will cycle through the flash settings. The cycles will be reflected with an icon in the upper left corner of the LCD screen.





Icon	Function
None	Automatic Flash
	Auto red-eye reduction
	Forced flash
	No flash

### 3. Focus Button

The camera's default setting is for automatic focus. However, the user can change to different focal distances by pressing the focus button. This can be useful under dark settings. The cycles will be reflected with an icon in the upper left corner of the LCD screen.

Icon	Function
None	Automatic Focus
	<b>Macro:</b> For taking pictures very close up. Set the lens as wide as possible, and in macro mode you can take images as close as 1.5 inches away. Great for insects, etc.
	<b>Manual Focus:</b> You can set the focus manually From 0.5 meters to infinity.
	
	
	
	

### 4. AE Program Button (Auto Exposure)

Icon	Function
None	Default
	<p><b>Twilight Mode:</b> Suppresses the blurring of colors of a bright subject in a dark place so that you can record the subject without losing the dark atmosphere of the surroundings.</p> <p>It is best to use the <b>Forced Flash</b> function with this program.</p>
	<p>Increases the effectiveness of the twilight mode function.</p> <p>It is best to use the <b>Forced Flash</b> function with this program.</p>
	<p><b>Landscape:</b> Focuses only on a distant subject to record landscapes, etc.</p> <p>It is best to use the <b>Forced Flash</b> function with this program.</p>
	<p>Changes the focus quickly and simply from a close subject to a distant subject.</p>

## 5. Control Button

This button will maneuver you through all the menus.

1. To display the menus, press the up arrow.

2. Navigate through the menus by pressing the control button left or right to highlight the desired menu item.
3. To display the sub-menus, press the up arrow or press the center of the button.
4. Continue to navigate through the menus by pressing either up/down or left and right using the center button to select.
5. To back out of the menus, press the down arrow.
6. If you get confused, directions are under the menu bar.

<b>Self-timer</b>	Enable the 10-second self-timer
<b>EFFECT</b>	<p><b>Picture Effects:</b>  Solarize  B&amp;W  Sepia  Negative art  Off</p> <p><b>Date/Time:</b>  Day and Time  Date  Off</p>

<p><b>FILE</b></p>	<p><b>Disk Tool:</b>  <b>Format</b>  <b>Disk Copy</b>  <b>Cancel</b></p> <p><b>File Number:</b>  Series  - Assigns numbers to files in a sequence even if the floppy disk is changed.  Normal  - Resets the file number that starts from 001 each time the floppy disk is changed.</p> <p><b>Image Size</b>  - Selects the image size when recording still images.</p> <p><b>Rec Mode</b></p> <p><b>Text</b> – Records a GIF in black and white  <b>Voice</b> – Records an audio file in addition to a JPEG file  <b>E-mail</b> – Records a small JPEG in addition  <b>Normal</b> – Records a JPEG file in the selected image size.</p>
--------------------	---

<b>CAMERA</b>	<p><b>Digital Zoom</b> On Off</p> <p><b>Sharpness:</b> + 2 to - 2 - Adjusts the sharpness of the image.</p> <p><b>White Balance:</b> <b>Indoor</b> - Places where the light conditions change quickly - Under bright lighting <b>Outdoor</b> - Recording a sunrise/sunset or night scene <b>Hold</b> - Recoding a single-colored subject or background <b>Auto</b> - Adjusts the white balance automatically</p> <p><b>Flash Level:</b> - <b>High</b> - <b>Normal</b> - <b>Low</b></p> <p><b>Exposure:</b> + 2.0 EV to - 2.0 EV Adjusts the Exposure.</p>
---------------	---

<b>SETUP</b>	<p><b>Beep</b></p> <p><b>Shutter</b></p> <ul style="list-style-type: none"><li>- Turns off the beep only. The shutter sound is heard when you press the shutter button.</li></ul> <p><b>On</b></p> <ul style="list-style-type: none"><li>- Turns on the beep only. The shutter sound is heard when you press the shutter button.</li></ul> <p><b>Off</b></p> <ul style="list-style-type: none"><li>- Turns off the beep/shutter sound. n.</li></ul> <p><b>LCD Bright:</b> Adjusts the LCD screen brightness</p>
--------------	---