

Operating the Sony Mavica FD-92 Digital Camera

1. Remove the lens cap.
2. Turn the camera so that the back of the camera is facing you.



3. By looking just to the right of the viewing screen, you will see a sliding switch labeled **MS** (Memory Stick) and **FD** (Floppy Disk). At this point, choose which form of photo storage you want to use then slide the switch to your choice.



To help you decide:

The memory stick will hold up to the **designated amount** memory or storage while the floppy disk holds **1.44 MB**. Digital cameras provided to core schools through the C·R·E·A·T·E for Mississippi grant use **32 MB** memory sticks. However, a memory stick's capacity can reach up to **128 MB currently**.



4. The memory stick is located in the lower right hand corner on the back of the camera.

5. In order to retrieve the photos from the memory stick, you must use a memory stick adaptor that is then used in a PC's floppy disk drive or a USB memory stick reader.

6. The floppy disk drive on the digital camera is located on the right side of the camera. **When inserting a floppy disk, make sure the front of the floppy faces you.**



7. To remove a floppy from the digital camera, slide the **disk eject** switch downward. The floppy should eject from the right side of the camera.

8. To power up the camera, slide the **ON** switch to the right.



9. To the left of the viewing screen you will see an **ON/OFF LCD BACKLIGHT** switch. *Always make sure it is turned on.*

10. If you are taking photos indoors, it is recommended that you use the flash which is indicated by a *lightning bolt* flash symbol. It is located on the back lower portion of the digital camera. You will also see the symbol on the LCD display below the minutes reading.



11. Next, locate the switch that reads **PLAY / STILL / MOVIE**. When taking a **photo**, make sure the switch is on **STILL**.



12. Holding the camera away from you, find your subject. Hold **the silver button** down part way. The green light will appear on the LCD display. This light indicates the camera is focusing. Press **the silver button** down the rest of the way to complete the snapshot.

13. You will know that you have taken the digital picture if the LCD screen displays a **RECORDING** message.



14. To view the photo, slide the switch to **PLAY**.



15. To create a fifteen second movie, slide the switch to **MOVIE** and press the silver button on the top right hand corner of the digital camera. It should show the progress of the movie being recorded in seconds.

16. To view the movie, slide the switch to **PLAY** then toggle up on the menu button. The menu task bar will then be displayed.

17. Toggle left to the **INDEX** submenu.



18. Toggle up to the thumbnail of the movie. Press straight down on the toggle switch. The movie will then play.

Authors:

LeAnn Moore, Educational Technologist, William J. Berry Elementary, Heidelberg, MS

C·R·E·A·T·E for Mississippi Staff

Contact Information:

Voice: 662-325-5009

Web site: <http://www.create4ms.org>